



Scan the QR code or link to the address below to find a list of datasheets to all products and other support information.

<https://www.tm-readers.com/downloads.htm>



These notes provide a general guidance for connecting and mounting the RXseries® of reader model(s) shown to the right.

Readers should only be installed by a qualified installer.

Mounting readers on (or near) metal may impair the read range of the unit.

The RX5^{WE} is a Third Millennium styled flush Panel Mount reader. The unit is a multi-technology reader suitable to interface with all standard access control systems, and may be used in speed gates and turnstiles, or other third-party enclosures.





CONNECTIONS / PIN OUT

OSDP® readers

RX5-WE
reverse face



1	OV	supply voltage ground
2	+Vdc	supply voltage (+10Vdc to + 16Vdc)
3	not used	-
4	not used	-
5	not used	-
6	not used	-
7	not used	-
8	not used	-
9	RS485 -	RS-485 Bus (GREEN)
10	RS485 +	RS-485 Bus (WHITE)

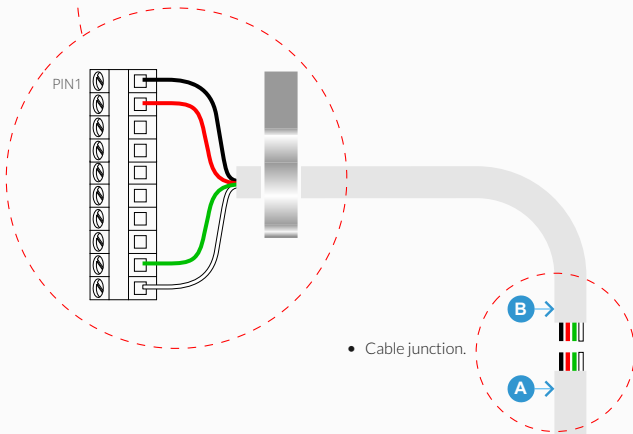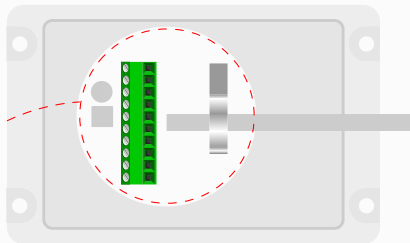

• Cable junction.



OSDP® reader DEFAULT SETTINGS


baud rate address



INSTALLATION

1

- The RX5^{WE} reader module is designed as an OEM unit to be positioned and installed as recommended by the customer or installer.
- This unit is configured to include a cable strain-relief bridge, allowing a communications cable to be inserted and secured using a simple cable-tie restraint, which in turn allows the unit to emulate a 'pigtail' installation.
- Length of pigtail cable approx' 2m (6.5 feet).

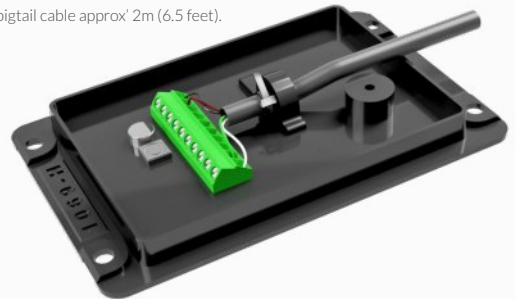

2

- Make cable connection **A** from your OSDP™ access control panel to site location of reader module.
- Locate and fix reader module to position as required, and in accordance with customer's / installer's recommendation.
- Run pigtail cable **B** and cut to length required to make cable connection from OSDP™ access control panel.
- Connect and make safe cable ends in accordance with current electrical recommendations and best practice.

3

- It is recommended that a 120 Ω resistor should be fitted between the data lines at each end of the RS-485 Bus.
- NOTE: Colour of wires are for representation only, and may differ from the cable you use.
- BELDEN 6381 MD cable (or equivalent) is recommended for use with OSDP™ readers.

All copyrights © and trademarks ® / ™ are acknowledged and remain the property of their respective owners.